



DESIGN ROLLER

- 9" Rubber design roller
- 7" Rubber design roller
- 4" Rubber design roller
- 7" PVC texture roller
- 6" Soft patten roller
- Ragging roller & tool
- Flocking roller

Firmen Sitz in Schwandorf
Glamour & Decor UG Germany
Hummel Str. 19 A
92421 Schwandorf
Telefon: +49 (0) 94 31 / 75 18 59
Mobil: +49 (0) 176 / 21 17 43 56
Skype: marina.bolgarov

Glamour & Decor UG Germany
www.glamourdecor.de

RUBBER ROLLER STYLE

Wallpaper Finish
Rubber Roller Refill



9"SF9100
(Dia: 38mm)

7"BE8100
(Dia: 48mm)

7"SF8100
(Dia: 38mm)

4"SF8103
(Dia: 38mm)



Decoration Roller
7"SF9501
(Dia: 38mm)

7"Decoration Machine
SF9501A
(With Single, Double Color)

Decoration Roller



Step 1: Apply first color.



Step 2: Put the paint into decoration machine.




Step 3: Rolling from top to bottom, keep straight..




FAUX!




Step 1: Apply texture paint.

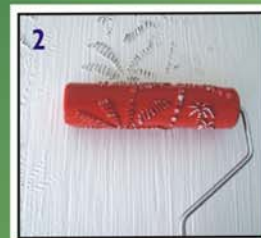

Step 2: Create pattern.

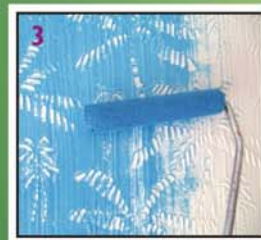

Step 3: Paint color.

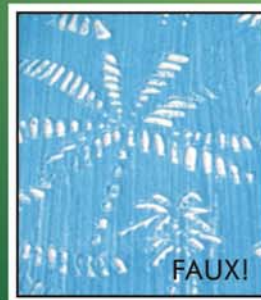

FAUX!

Texture Finish
Rubber Roller



American Style



European Style



9"SF9101
(Dia: 38mm)

7"BE8101
(Dia: 48mm)

7"SF8101
(Dia: 38mm)

4"SF8103
(WITH FRAME)
(Dia: 38mm)

SIZE: 9inch 38mm Diameter



NO.A03



NO.A15



NO.A18



NO.A23



NO.A24



NO.A26



NO.A27



NO.A31



NO.A35



NO.A41



NO.A44



NO.A45




NO.A46



NO.A47



NO.A48

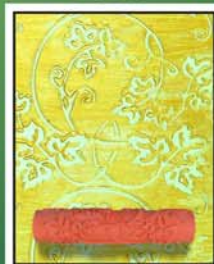

NO.A49


SIZE: 9inch 38mm Diameter




NO.A51



NO.A53

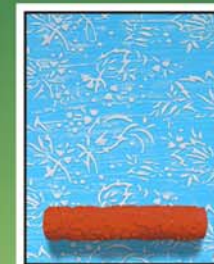


NO.A55

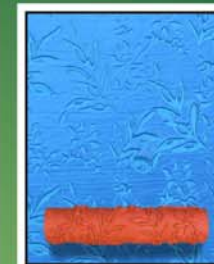

NO.A56



NO.A57

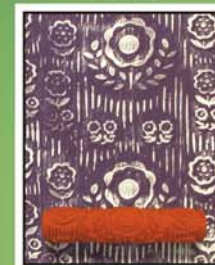

NO.A58



NO.A59



NO.A60



NO.A61



NO.A62



NO.A63



NO.A64



NO.A66



NO.A67



NO.A68



NO.A69




NO.A70



NO.A71



NO.A72

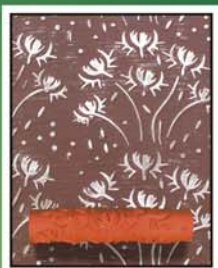

NO.A73



NO.A74



SIZE: 7inch 48mm Diameter



NO.B02



NO.B03



NO.B04



NO.B05



NO.B06



NO.B07



NO.B08



NO.B09



NO.B10



NO.B11



NO.B12



NO.B13



NO.001



NO.002



NO.003



NO.004



NO.005



NO.006



NO.007



NO.008




NO.009



NO.010



NO.011

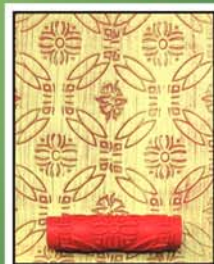

NO.012



NO.013



NO.014



NO.015



NO.016



NO.017



NO.018



NO.019



NO.020



NO.021



NO.022



NO.023



NO.024



NO.025



NO.026



NO.027



NO.028



NO.029



NO.030




NO.031




NO.032



NO.033

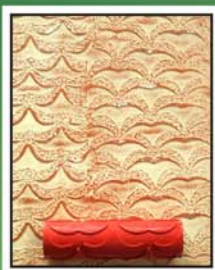

NO.034

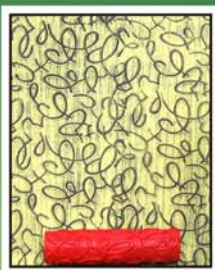

NO.035



NO.038



NO.039



NO.040



NO.042



NO.043



NO.044



NO.045



NO.050



NO.051




NO.052



NO.053



NO.054

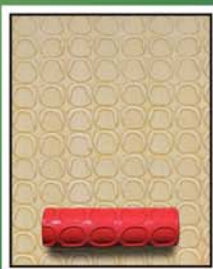

NO.055



NO.056



NO.057



NO.058



NO.059



NO.060



NO.061




NO.062



NO.065



NO.066

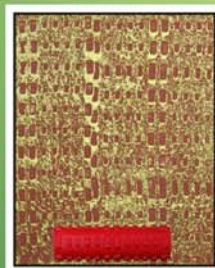

NO.067



NO.068



NO.070



NO.071



NO.072



NO.073




NO.074



NO.075



NO.076

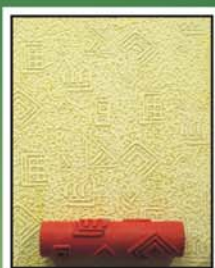

NO.077



NO.078



NO.079



NO.081



NO.083




NO.084



NO.086



NO.087

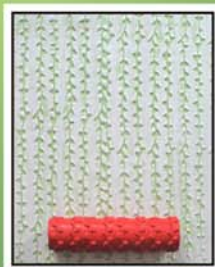

NO.088



NO.089



NO.090



NO.091




NO.094



NO.095



NO.097

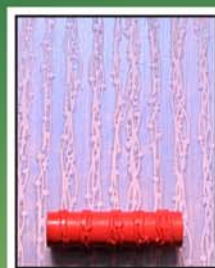

NO.098



NO.100



NO.101



NO.106



NO.107



NO.110



NO.112



NO.113



NO.116



NO.118



NO.119



NO.121



NO.122



NO.123



NO.124



NO.125



NO.126



NO.127




NO.128



NO.129




NO.130

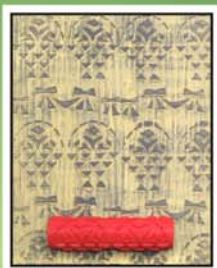

NO.131



NO.132

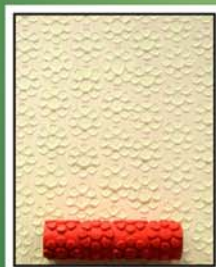

NO.133



NO.134



NO.135



NO.136



NO.137



NO.138



NO.139




NO.140



NO.141



NO.142

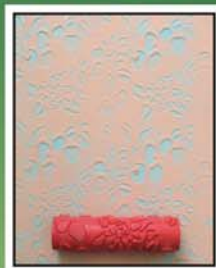

NO.143



NO.144



NO.145



NO.147



NO.149



NO.150



NO.151



NO.153



NO.154



NO.155




NO.156



NO.157



NO.178

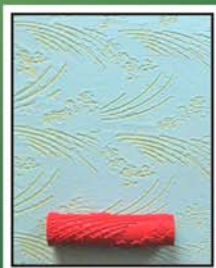

NO.179



NO.180



NO.181



NO.182



NO.183




NO.184



NO.185



NO.186

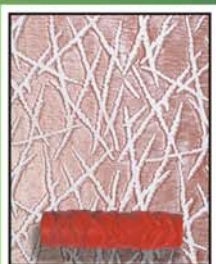

NO.187



NO.188



NO.189




NO.190



NO.191



NO.192

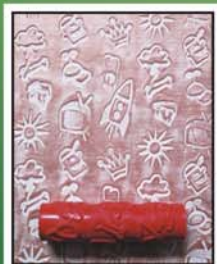

NO.193



NO.194



NO.195



NO.201



NO.202



NO.203



NO.204




NO.205




NO.206




NO.207

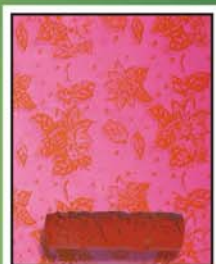


NO.208

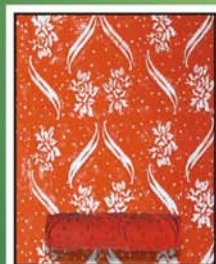

NO.209

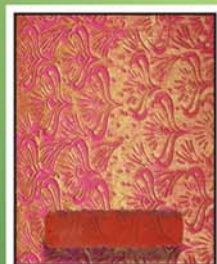


NO.210

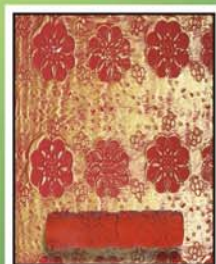

NO.211



NO.212

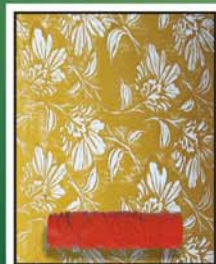

NO.213




NO.214



NO.215



NO.216

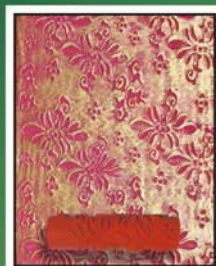

NO.217




NO.218



NO.219



NO.220

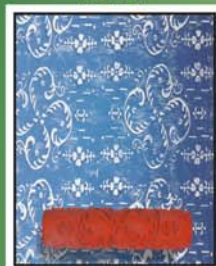


NO.222



NO.223



NO.224

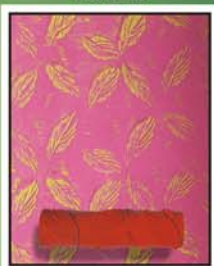

NO.225



NO.226




NO.227



NO.229



NO.231

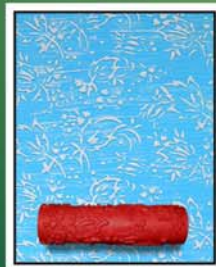

NO.233



NO.234



NO.235



NO.236



NO.237



NO.238



NO.239



NO.240



NO.241



NO.242



NO.244



NO.245



NO.246



NO.247



NO.248



NO.249



NO.250



NO.251



NO.252

4" RUBBER ROLLER STYLE



NO:158



NO:159



NO:160



NO:161




NO:162



NO:163



NO:164

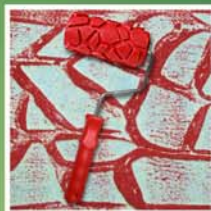

NO:165



NO:166



NO:167



NO:168



NO:169



NO:170



NO:171



NO:172




NO:173



NO:174



NO:175

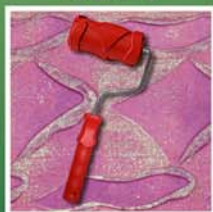

NO:176



NO:177

7" TEXTURE ROLLER



GL-01



GL-02



GL-03



GL-05



GL-06



GL-07



GL-08



GL-09



GL-10



GL-11



GL-12



SOFT PATTERN ROLLER



Step 1: Apply first color.





Step 2: Allow the to point take in the to foam roller.



Step 3: Roll or Pad through the wet glaze at random to structure the different ragging effect.



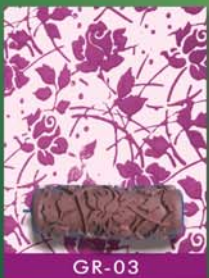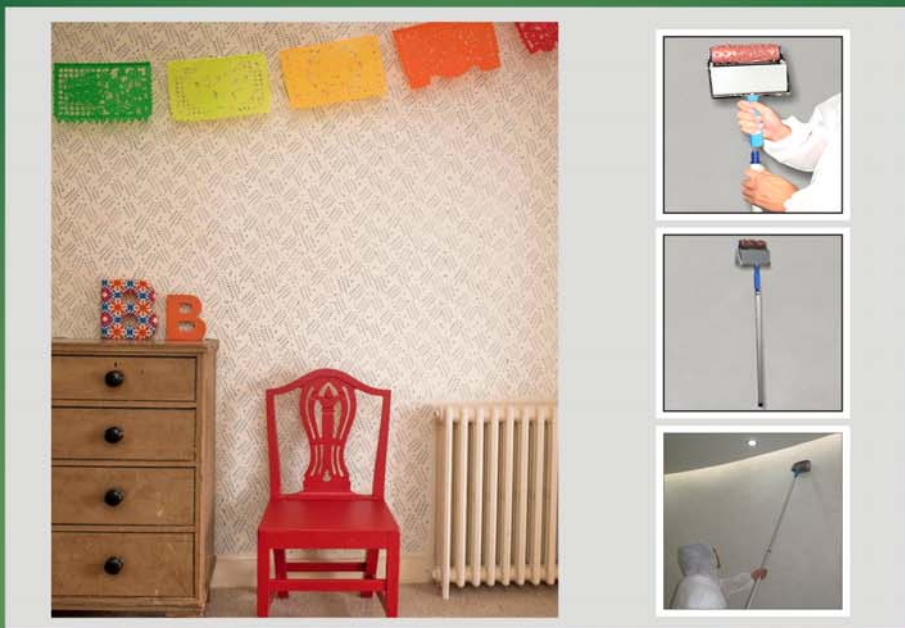



GR-23



GR-24



GR-25



GR-26



GR-27



GR-28



GR-29



GR-30



GR-31



GR-32



GR-33



GR-34



GR-35



GR-36



GR-37




GR-38



GR-39



GR-40

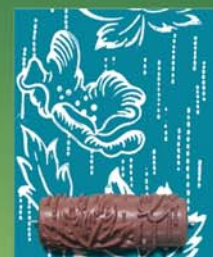

GR-41



GR-42



GR-43



GR-44



GR-45



GR-46



GR-47



GR-48



GR-49



GR-50



GR-51



GR-52




GR-53



GR-54



Step 1: Apply the base coat to lowluster latex enamel, using a paintroller or paintbrush. Allow the paint to dry.

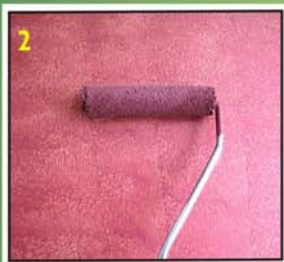

Step 2: Mix the glaze for the top coat. Apply an even coat of glaze over the base, rolling or brushing vertically. Work in small areas to ensure the paint remains wet as you work it.



Step 3: Roll or Pad through the wet glaze at random to structure the different ragging effect.



Item No: SB-TM1
Size: 7"



Item No: SB-TM2
Size: 7"



Item No: SB-TM3
Size: 7"



Item No: SB-TM4
Size: 7"



SB-TM5-1
Size: 7"




SB-TM5-2
Size: 7"



SB-TM5
Size: 7"



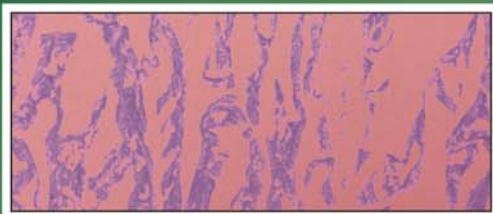

Item No: SB-TM6
Size: 7"



Item No: SB-TM7
Size: 7"



Item No: TM-G2
Size: 7"



Item No: SB-H02
Size: 7"



Item No: SB-H07
Size: 7"

Item No: SB-H09
Size: 7"




Item No: SB-H12
Size: 7"



Item No: SB-RT
Size:



Item No: RT
Size: 15 X 15cm
20 X 20cm

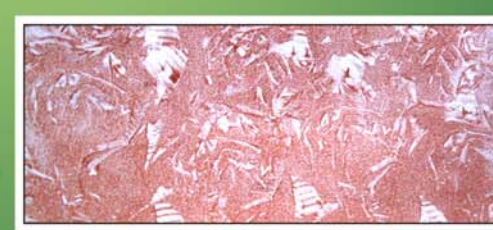


Item No: SB-F01
Size: 7"







Item No: SB-F02
Size: 7"

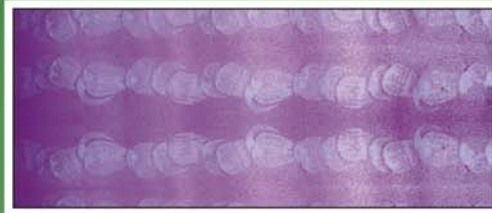


Item No: SB-F03
Size: 7"

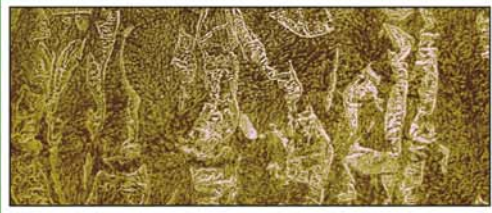

Item No: SB-F04
Size: 7"

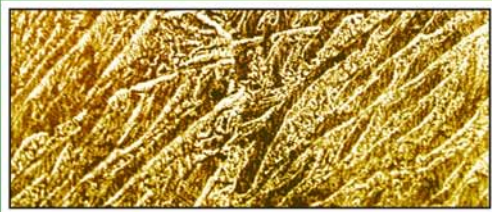

Item No: SB-F05
Size: 7"

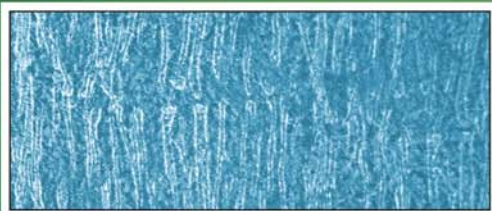


Item No: SB-F06
Size: 7"

Item No: SB-F07
Size: 7"



Item No: RP-01
Size: 20.3X8.7cm

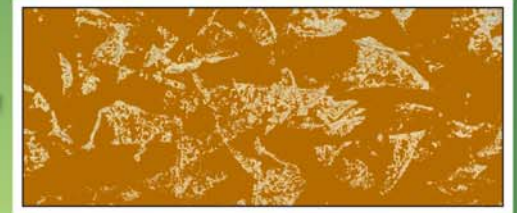

Item No: RP-02
Size: 20.3X8.7cm




SB-P01
Size: 15 X 15cm



SB-P02
Size: 15 X 15cm



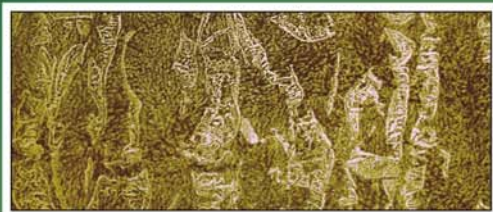

Item No: SB-F04-L
Size: 9"




Item No: SB-TM5-L
Size: 9"



Item No: SB-RT-L
Size:



Item No: IN-01
Size: 9"

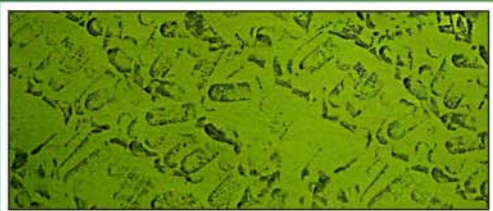


Item No: IN-02
Size: 9"

FLOCKING ROLLER



Step 1: Apply the base coat of low-luster latex enamel from any base coat roller. Allow paint to dry.

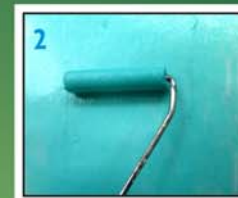

Step 2: Use tray for apply enough and wet paint for creating pattern.



Step 3: Roll Sky roller or floral roller in the paint tray, take care roller must absorbed paint well.



Step 4: Roll Sky FLORAL roller on dry base for impressive effect.



Cleaning Instructions: Remove as much of the excess material as possible. Wash in warm soapy water ensuring all materials is removed. With oil based paints use a recommended cleanser prior to washing. Rinse thoroughly. Do not store until completely dry.



IN-F01



IN-F02



IN-F03



IN-F10



IN-F11



IN-F12



IN-F04



IN-F05



IN-F06



IN-F13



IN-F14



IN-F15



IN-F07



IN-F08



IN-F09



IN-F16

